

TRINITY INSTALLATION INSTRUCTIONS

STEEL WALL BRACKET – AUTOMATIC IGNITION

Applies to all Steel Wall Mounted Trinity Lanterns

Sizes Mini–Large Supplied w/:

- 4–#8–32 Acorn Nuts
- 4–4" x 1/4" Hanger Bolt

Size Grande Supplied w/:

- 4–#8–32 Acorn Nuts
- 4–5" x 1/4" Hanger Bolt


Natural Gas Requires 7" W.C. BTU 2730

Propane Gas Requires 11" W.C. BTU 2080

Screw the Hanger Bolt into the wall leaving enough to penetrate through the holes in the Wall Bracket. Connect the gas line from the lantern to the main. Make sure to test the fittings for gas leaks before securing the lantern to the wall. Connect the Smooth(+) & Ribbed(-) wires to power source. Position light over the Hanger Bolt and attach the Acorn Nuts, tightening to securely mount light. Apply Caulking to both sides and top of Wall Box. DO NOT apply on bottom.


Clearance:

- 12" from vent to ceiling
- 6" from sides

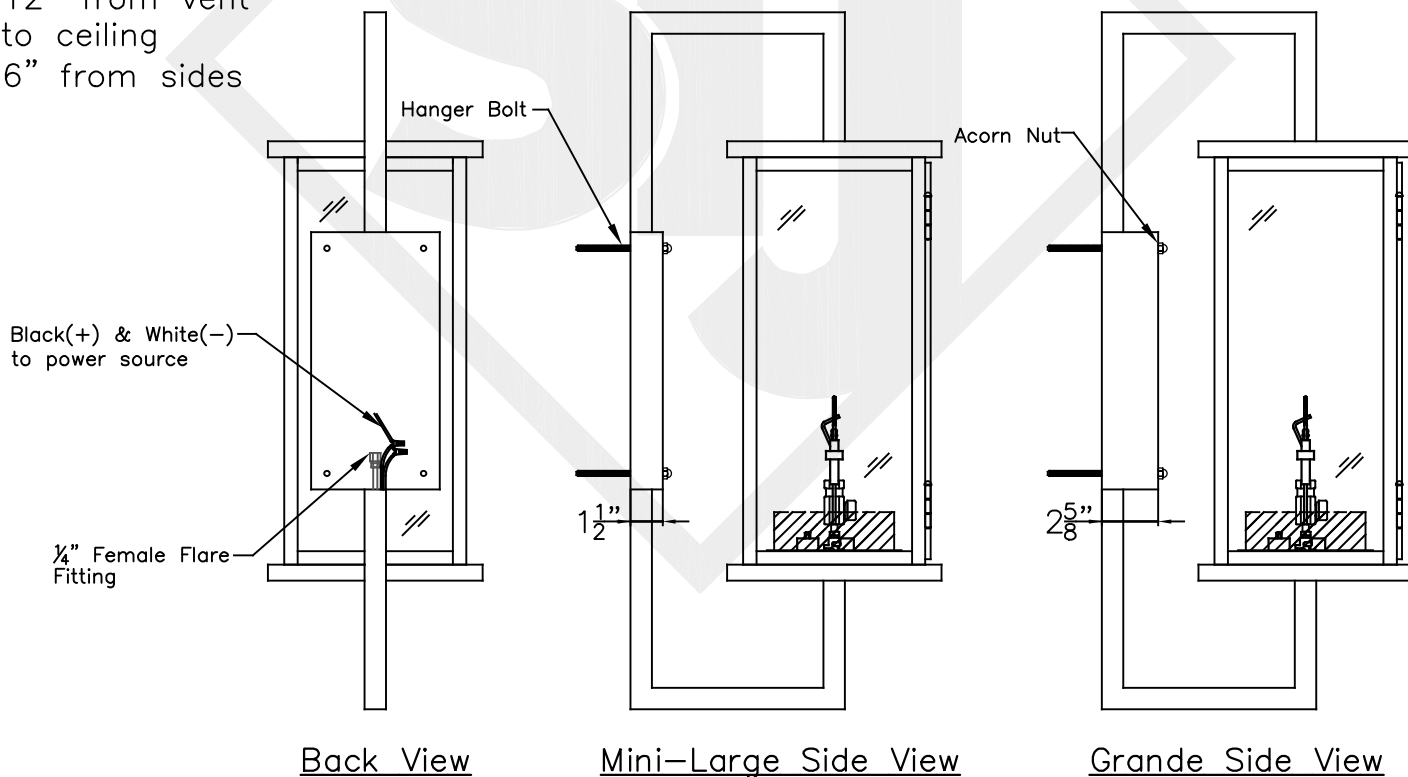

CAUTION: Risk of fire or electric shock

This product is to be installed by a qualified Plumber ONLY. Installation must conform with all local codes or, in the absence of local codes, to UL 1598, Gas Code ANSI Z21.42 – 2004, Gas Illuminating Appliance

Trinity Install Steel Wall Bracket	
	St. James LIGHTING
SCALE: N.T.S.	DRAFT: B. Vial
FILE: INSTALL	APP'D: J. Ragan
JOB: X	DATE: 06/25/18