

# TYPICAL INSTALLATION INSTRUCTIONS

## STEEL WALL BRACKET – AUTOMATIC IGNITION

Applies to all Steel Wall mounted lanterns  
 Sizes : Small, Medium Large & Grande


Light Supplied w/  
 4–Acorn Nuts  
 4–5” x ¼” Hanger Bolt

Natural Gas Requires 7” W.C. BTU 2730  
 Propane Gas Requires 11” W.C. BTU 2080

Screw Hanger Bolts into the wall leaving enough to penetrate through the holes in the Wall Bracket. Connect the gas line from the lantern to the main. Make sure to test the fittings for gas leaks before securing the lantern to the wall. Connect wires to power source, Blue to Black & White to White. Position light over the Hanger Bolts and attach Acorn Nuts, tightening to securely mount light.

Clearance:

–12” from vent  
 to ceiling  
 –6” from sides

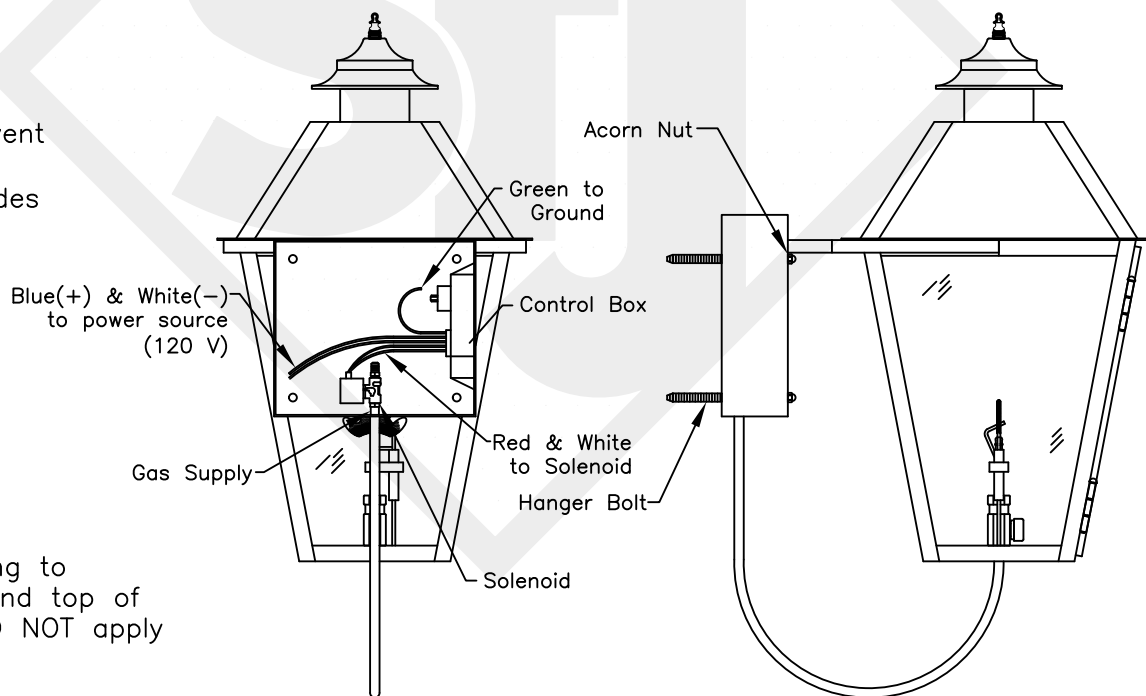

Back View

Side View

Apply Caulking to both sides and top of Wall Box. DO NOT apply on bottom

CAUTION: Risk of fire or electric shock

This product is to be installed by a qualified Plumber ONLY. Installation must conform with all local codes or, in the absence of local codes, to UL 1598, Gas Code ANSI Z21.42 – 2004, Gas Illuminating Appliance

Typical Install Steel Wall Al	
St. James LIGHTING	
SCALE: N.T.S.	DRAFT: B. Vial
FILE: INSTALL	APP'D: J. Ragan
JOB: X	DATE: 06/25/18